

Autodesk® Revit®  
Autodesk® Revit® Structure  
Autodesk® Robot™ Structural Analysis Professional

# Integrating Autodesk Revit, Revit Structure, and Robot Structural Analysis Professional

This paper explores the interoperability between Autodesk Revit, Revit Structure, and Robot Structural Analysis Professional—including recommended workflows, analytical modeling best practices, and the details of the data exchange between the software solutions.

Structural engineers typically start the design process by interpreting architectural drawings, creating design documentation, and creating various analytical models. These analytical models must be consistently coordinated with respect to general framing layout, material and section properties, and loading. Once analysis and design is complete the design documentation is modified to reflect the most current design. This workflow is repeated for each iteration of the design process.

The link between Autodesk® Revit® 2013 or Autodesk® Revit® Structure 2013 software and Autodesk® Robot™ Structural Analysis Professional 2013 software helps make this workflow smoother by facilitating the coordination of design documentation with structural analytical design information.

Revit<sup>1</sup> software supports the Building Information Modeling (BIM) process for structural engineers by providing a physical model of the structure to use for documentation and an associated analytical model as well as other structural attributes and properties to use for structural analysis and design. Robot Structural Analysis Professional supports BIM with its advanced analysis and multi-material design functionality. The bidirectional interoperability of Revit and Robot Structural Analysis Professional software helps reduce the time needed to create and update multiple analysis models and helps to avoid

---

<sup>1</sup> Autodesk Revit 2013 contains the functionality of Autodesk® Revit® Architecture 2013, Autodesk® Revit® MEP 2013, and Autodesk® Revit® Structure 2013 software, and is available in the Autodesk® Building Design Suite Premium and Ultimate editions. To limit product name repetition, the use of the name “Revit” throughout the rest of this paper refers to *both* Autodesk Revit and Autodesk Revit Structure.

potential errors resulting from a manual coordination between analysis results and construction documentation.


# Contents

<b>More Streamlined Information Exchange.....</b>	<b>3</b>
<b>Design/Analysis Interoperability.....</b>	<b>6</b>
<b>Interoperability Command.....</b>	<b>8</b>
Sending .....	8
Send – Basic Options.....	9
Send – Additional Options.....	10
Update.....	11
<b>Best Practices.....</b>	<b>12</b>
Analytical Modeling.....	12
Structural Content.....	12
Automatic Physical/Analytical Relations .....	13
Alignment and Constraints .....	13
Analytical Model Projections.....	13
Bracing.....	13
Sloped Framing .....	14
Phases and Design Options .....	15
Analytical Model Adjustment.....	16
Analytical Alignment .....	16
Manual Adjustment of the Analytical Model.....	16
Analytical Model Consistency Checks .....	18
Warnings .....	18
Analytical Check Tools .....	18
Analytical Attributes .....	19
Member End Releases.....	19
<b>Best Practices for Updates and Collaboration .....</b>	<b>20</b>
<b>Scope of Transferred Model Elements .....</b>	<b>21</b>
Supports .....	21
Linear Elements.....	22
Loads.....	25
Concrete Reinforcement.....	25
Other Elements and Element Parameters .....	26
<b>Summary .....</b>	<b>27</b>

## More Streamlined Information Exchange

Some structural engineering firms begin the design process by creating documentation. Others start by creating an analytical model. The link between Autodesk Revit software products and Robot Structural Analysis Professional supports both workflows. However, there are some advantages to starting the design process with a model in Revit software instead of Robot Structural Analysis Professional.

For instance, in addition to creating construction documents, many firms use the Revit Structure model to help coordinate their designs with other disciplines. Therefore, structural drafters can begin modeling, documenting using company standards, and coordinating the structure. By starting the design in Revit software, there is both a physical model created for coordination and early documentation, as well as a simplified analytical model. Each model is independently editable but also maintains a consistent relationship to the other.

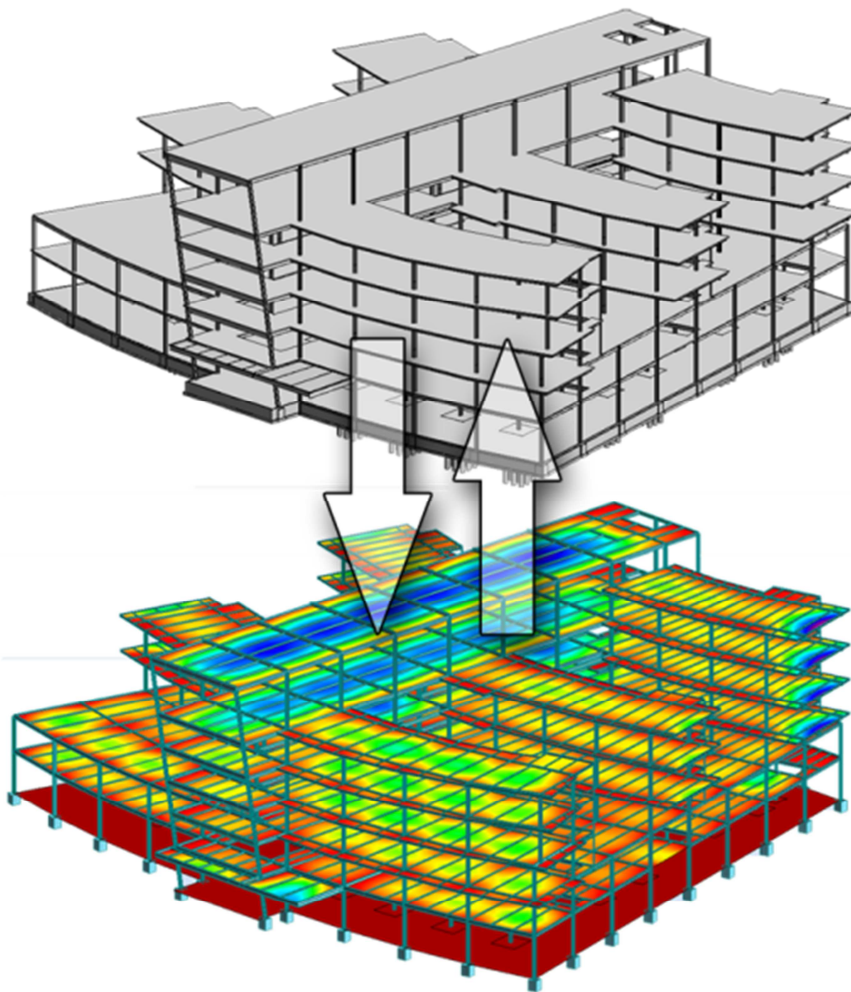

**Figure 1:** The bidirectional link between Revit software and Robot Structural Analysis Professional enables firms to add analysis-related information to the Revit model, use that model directly for analysis in Robot Structural Analysis Professional, and then update the Revit model based on the analysis results.

## INTEGRATING REVIT AND ROBOT STRUCTURAL ANALYSIS PROFESSIONAL

Moreover, Revit software capabilities enable structural designers to enrich the physical model with information such as physical properties, proposed analytical model definition, and expected loads conditions. This makes the physical model more complete and also enhances collaboration with structural engineers.

For example, in a traditional workflow the CAD technician or designer creates a physical model defining expected relations with its analytical representation, which is a simplification of more detailed, 'real' geometry. The CAD technician must then wait until the engineer has completed the structural analysis and design before starting coordination and documentation tasks.

Whereas the bidirectional link between Revit software and Robot Structural Analysis Professional helps make the exchange of structural analytical information smoother. The link enables firms to add analysis-related information to the Revit model, use that model (and information) directly for analysis in Robot Structural Analysis Professional, and then update the Revit model based on the analysis results. This iterative data exchange respects and preserves the information defined in both software solutions.

In Revit software, the physical model and the associated analytical model (which contains the boundary conditions and load definitions used for analysis) are created concurrently. Thus, the structural designer creates both the physical and analytical model using Revit software and then sends the analytical model to a structural engineer who uses Robot Structural Analysis Professional for structural analysis.

Once the model has been linked to Robot Structural Analysis Professional, the engineer begins the analysis and code design process. After an initial analysis, the engineer may want to make some changes to the analytical model based on calculated results.

In some cases the engineer may also decide to make changes to the model prior to initial analysis based on experience and knowledge. Additionally, the engineer may define more load cases and loads using Robot Structural Analysis Professional.

After the analysis has been performed, the engineer explores the results and starts to design the structural elements. Using Robot Structural Analysis Professional, the engineer can also run code checking to design concrete, steel, and timber elements based on a wide variety of national and international codes.

When the engineer has completed design changes and the analysis, the information is transferred back to Revit software, allowing the designer to review the design changes from the analysis and code-checking phase and update the physical model accordingly.

## INTEGRATING REVIT AND ROBOT STRUCTURAL ANALYSIS PROFESSIONAL

Below is a recommended workflow for concurrent structural documentation, design, and analysis:

- The CAD technician creates a structural model based on an existing architectural model or existing architectural 2D layouts.
- The structural designer adjusts material and profile definitions, and adjusts the analytical model proposed by Revit software. Autodesk recommends the use of Content Generator Extension<sup>2</sup> to help create appropriate material definitions and sections based on regional catalogues that contain necessary structural properties needed for further analysis and code checking.
- The designer also creates loads and load combinations that can be used for analysis in Robot Structural Analysis Professional, as well as preliminary or load takedown analysis available with Revit Extensions<sup>3</sup>. This information can also be used within design and code checking applications such as the Composite Design Extension for composite steel framing.
- The designer then sends the Revit model to Robot Structural Analysis Professional. In this fashion, the engineer exploits the interoperability between the software solutions—using the Revit analytical model and the Robot Structural Analysis Professional software to perform structural analyses.
- Based on analysis outcomes, the engineer may make decisions that need coordination with the designer (and perhaps ultimately the architect as well). Within Robot Structural Analysis Professional, the engineer updates the analytical model with recommended changes and alerts the designer.
- The designer, using Revit software, reviews the engineer's recommended changes to the analytical model. In collaboration with the engineer, the designer accepts or rejects the proposed changes to the analytical model and the Revit software automatically adjusts the physical model accordingly.
- This iterative collaboration between the designer and engineer repeats as necessary.
- The designer may also adjust section sizes and properties, based on information received from Robot Structural Analysis Professional or other code checking applications linked with Revit software.


---

<sup>2</sup> The Content Generator Extension is part of the Autodesk® Revit® Extensions for Autodesk® Revit® 2013 software products, which deliver a full range of benefits to enhance Revit software. Revit Extensions for Revit include tools for structural analysis, modeling, concrete reinforcement, interoperability, and construction documentation. All Revit Extensions are available through the Autodesk Subscription Program.

<sup>3</sup> All Revit Extensions are available through the Autodesk Subscription Program for Autodesk® Revit® 2013 software products.

## Design/Analysis Interoperability

The link between Revit software and Robot Structural Analysis Professional allows engineers to send selected portions of a Revit model to Robot Structural Analysis Professional, and vice versa. This flexibility allows the engineer to work with the structure in separate analysis models.

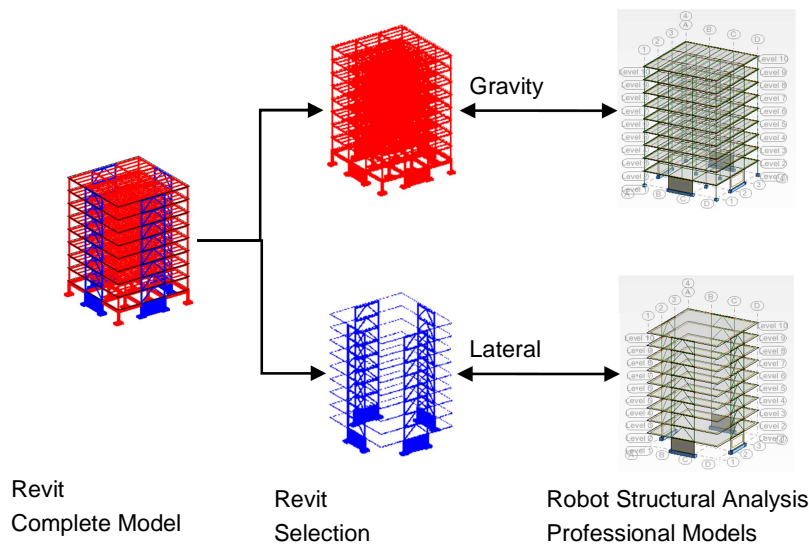

**Figure 2:** Filtered views in Autodesk Revit and Revit Structure software are used to create separate analysis models in Robot Structural Analysis Professional.

For example, the engineer can create separate analysis and design for:

- Gravity and lateral systems
- Structural steel and reinforced concrete systems
- Logical separations in structure
- Evaluations of specific elements
- Phased construction and design options

Modeling a structure in Revit software helps the user visualize the relationship between a real physical structure and its analytical simplification, which is needed for analysis. Furthermore, this physical structural model is the basis for documentation as well as code checking (which focuses on physical elements and attributes such as section sizes, materials, rebar, and so on).

However, certain elements or parameters may be easier to model and adjust in Robot Structural Analysis Professional such as member end releases, loads, and boundary conditions. As an advanced analysis software solution, Robot Structural Analysis Professional has more robust capabilities in this area. For example, the creation of Load Combinations is more automated in Robot Structural Analysis Professional, which can auto-generate numerous combinations at once. Additionally, the software has more options for creating loads. Then again, there are instances where it may be necessary or preferable to model loads using Revit software, primarily for use in other Revit Extensions or other applications for analysis and code checking.

## INTEGRATING REVIT AND ROBOT STRUCTURAL ANALYSIS PROFESSIONAL

At the start of a project, designers and engineers should decide which software application to use for supports and loads definition (i.e. Autodesk Revit, Revit Structure or Robot Structural Analysis Professional) and then continue to use that application throughout the iterative bidirectional design/analysis process.

A suggested approach for analysis and design is as follows:


- Model these elements in Revit software:
  - Grids and levels
  - Structural columns and framing
  - Structural floors and foundations
  - Structural materials definition
  - Preliminary design load cases and loads
  - Boundary conditions and member end releases
- Perform preliminary analysis and design with available Revit Extensions
- Send to Robot Structural Analysis Professional
- Enrich the analytical model in Robot Structural Analysis Professional by adding:
  - Final design load cases, loads, and load combinations
  - Advanced boundary conditions and member end releases
  - Meshing and advanced analysis parameters
- Perform final analysis and design in Robot Structural Analysis Professional
- Update these Revit elements from Robot Structural Analysis Professional
  - Spatial analytical model
  - Member sizes
  - Designed concrete reinforcement
- Use Revit software to check and approve the proposed changes by:
  - Adjusting the location of physical elements
  - Helping to coordinate the physical changes with other disciplines
- Repeat for each design iteration as needed

There is no correct or incorrect workflow for analysis interoperability. The optimal workflow for one firm or a particular project may be different for another. Factors to consider include:

- Division of modeling, design, analysis, and documentation tasks by CAD technicians, designers, and engineers
- Work-sharing and collaboration standards
- Number and types of licenses for Revit software and Robot Structural Analysis Professional software
- Use of multiple analysis tools on one project
- Use of multiple code checking tools

# Interoperability Command


When Robot Structural Analysis Professional is installed on the same computer as the Revit software, new commands are added to the Revit user interface that provide a link between the two products. This link enables the Revit user to send a Revit model to Robot Structural Analysis Professional for analysis and design, and update the Revit model based on the results of the analyses. All analyses and design is performed in Robot Structural Analysis Professional, except for composite steel framing. The Composite Design Extension is used to analyze and design composite steel framing directly in Revit software.

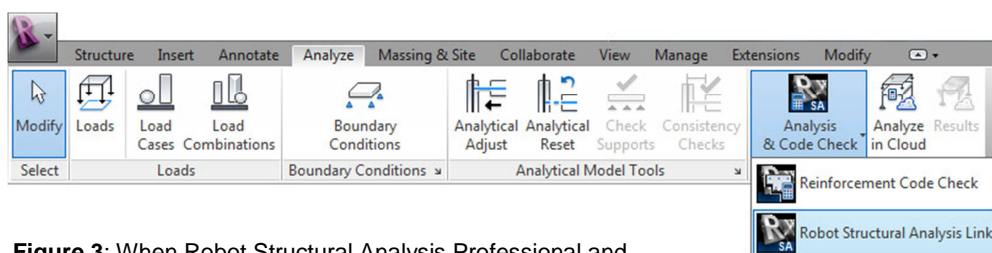

**Figure 3:** When Robot Structural Analysis Professional and Revit software are installed on the same computer, the Revit user interface provides a link between the two software applications.

## Sending

After selecting the Robot Structural Analysis Link, the user has the option to send a model to—or update a model from—Robot Structural Analysis Professional.

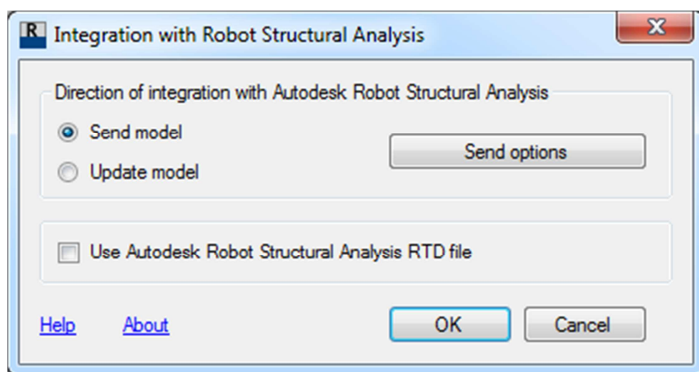

**Figure 4:** This dialog box enables users to send or update a Revit model to or from Robot Structural Analysis Professional.

If there are two users (for example, a designer using Revit software on one computer and an engineer using Robot Structural Analysis Professional on another computer), the Revit user should check the “Use Autodesk Robot Structural Analysis RTD file” option. In this case, the Revit model data is transferred to the Robot Structural Analysis Professional user via an RTD<sup>4</sup> file, enabling a designer to continue to work in Revit software while an engineer uses the RTD file in Robot Structural Analysis Professional on a separate computer.

If a single user has both software applications installed on one computer, do not check this option. The model is automatically transferred from Revit software to Robot Structural

<sup>4</sup> RTD is the native file format of the Robot Structural Analysis software.




Analysis Professional and the Robot software is launched. This workflow may be beneficial for a quick analysis check or small design update.

## Send – Basic Options

There are a few basic options to consider when sending a model to Robot Structural Analysis Professional. The designer can send the entire model or select a specific portion of the model to be sent. Sending only a selection of the model is useful when performing analysis and design for certain elements or structural systems, or when making small modifications in layout or design.

The option to execute model correction in Robot Structural Analysis Professional will apply the default model correction<sup>5</sup> procedure to the model in Robot Structural Analysis Professional. However, Autodesk recommends that users make adjustments to the analytical model using the Revit software, which will automatically maintain consistency between the analytical and physical model.

Self-weight of the structure can be ignored or placed on the Load Case of the engineer's choosing. The Load Cases must be created in Revit software prior to executing the command.

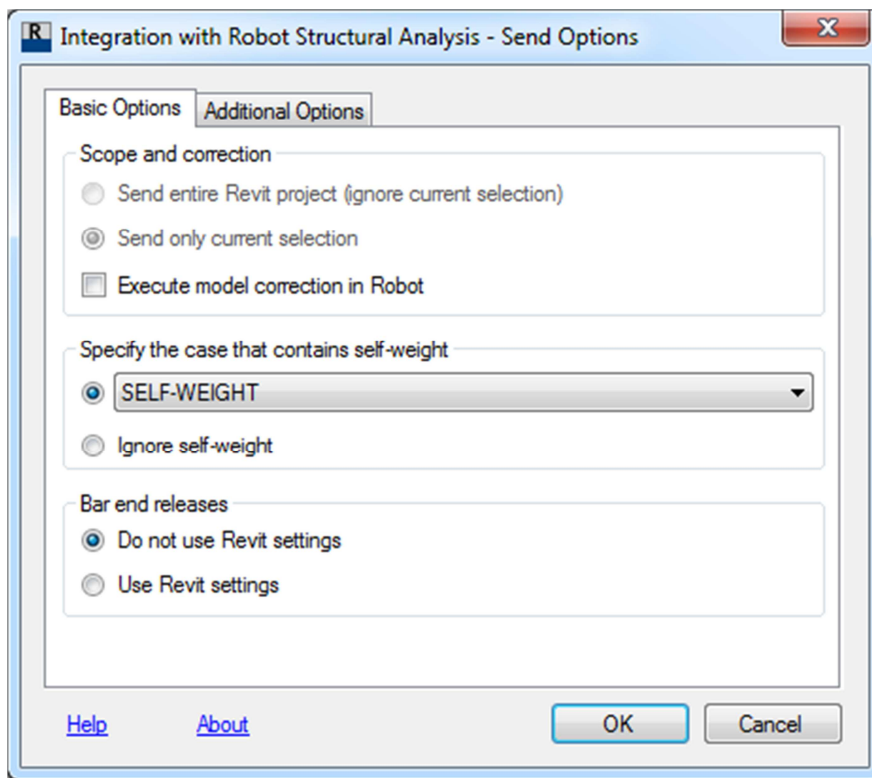

**Figure 5:** Dialog box showing options for sending a Revit model to Robot Structural Analysis Professional.

Finally, member end releases may be set for each member in Revit software, in which case the user has the option to send these settings to Robot Structural Analysis Professional or to ignore the Revit settings and make all end release adjustments in Robot Structural Analysis Professional. Member end releases in Revit software are set to

<sup>5</sup> For complete information regarding the model correction settings and behavior, please reference the Robot Structural Analysis Professional help files.


Pinned-Pinned by default. If they are left unchanged and sent to Robot Structural Analysis Professional, an initial analysis calculation will invariably reveal numerous instabilities and result in calculation errors. The Bar end releases option allows the engineer to use Revit software settings in Robot Structural Analysis Professional or to ignore those settings and optionally change all Pinned-Pinned releases to Fixed-Fixed. In the latter case, the engineer uses Robot Structural Analysis Professional for the assignment of all end releases.

The recommended approach is to define release settings in Revit software that reflect the engineering intent for the behavior of structural member. In this situation, select the "Use Revit settings" option when transferring data to Robot Structural Analysis Professional.

## Send – Additional Options

Users can send materials defined in Revit software to Robot Structural Analysis Professional as new materials. Alternatively, the engineer may choose to use Robot Structural Analysis Professional default materials or let the software map the Revit material to the best matching Robot Structural Analysis Professional material.

Since Revit materials have parameters related to graphic standards, rendering materials, and other attribute data, the use of Revit materials is recommended. By selecting the option "Define new materials in Robot", the Revit materials are retained in the model and new corresponding materials are automatically defined in Robot Structural Analysis Professional.

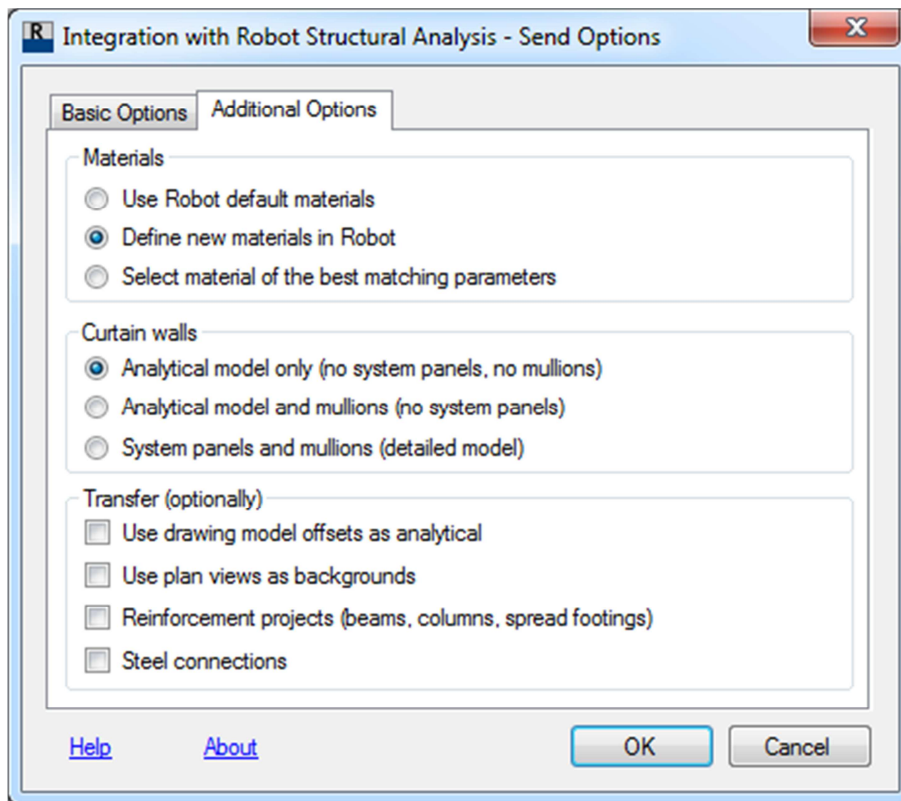

**Figure 6:** Additional options for sending Revit models to Robot Structural Analysis Professional.

Curtain walls defined in Revit software can also be transferred to Robot Structural Analysis Professional. These are transferred as Cladding elements rather than finite (Panel) elements in order to assign area loads and direction of span.

Transferring the model using drawing model offsets provides additional control over the location of certain elements in Robot Structural Analysis Professional. Selecting this option is useful in certain situations where a particular alignment of geometry is important for analysis as well as documentation.

By selecting to transfer reinforcement projects, modeled concrete reinforcing bars are sent to Robot Structural Analysis Professional.

### Update


The options for updating a Revit model from Robot Structural Analysis Professional are similar to the options for sending a model. Note that in addition to updating the entire model, selected elements in either Robot Structural Analysis Professional or Revit software can be updated.

If the "Select modified elements" option is checked, the Revit software will highlight all the new or revised elements that were updated from Robot Structural Analysis Professional, enabling the user to more easily review the model.

Within the analytical model, the software can:

- Update section definitions
- Update analytical line locations
- Add or remove structural elements

In addition, the software can transfer reactions and internal forces calculated in Robot Structural Analysis Professional to Revit software for use in documentation.

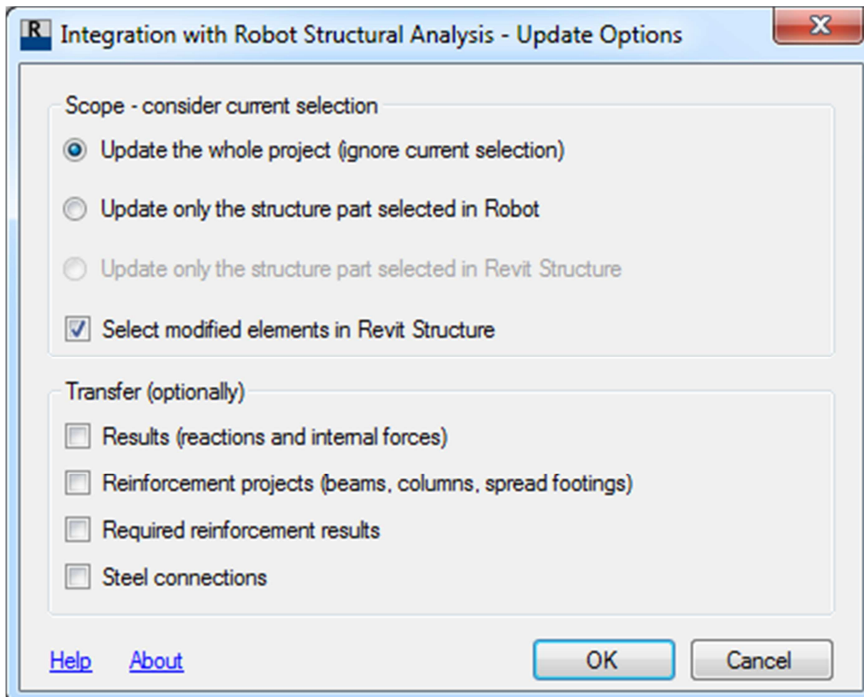

**Figure 7:** Options for updating a Revit model from Robot Structural Analysis Professional.

# Best Practices

The following recommendations are provided to facilitate the transfer of elements between Revit software and Robot Structural Analysis Professional.

## Analytical Modeling

There are two ways a Revit software user creates an analytical model:

1. As the user defines the physical model, the software will automatically create an analytical model and keep that analytical model consistent with the physical model.
2. The user can also adjust this analytical model manually by manipulating analytical nodes positions.


The software's automatic relation settings should reflect how the user intends to manage the relationship between the physical and analytical models over time as changes occur.

The automatic relation settings are predefined rules that the software uses to automatically create a more accurate, analytical simplification of the physical model. But that analytical simplification is subjective and engineers may want an analysis model defined in a way that suits their individual expectations and requirements. Therefore, the user can manually adjust the analytical model. When editing the analytical model, a customized relation between physical and analytical model is created, keeping the analytical and physical model synchronized as changes occur.

Autodesk recommends that the Revit software user take advantage of the automatic relation settings when first creating a physical model and adjust them later as needed.

## Structural Content

The Content Generator Extension (part of Revit Extensions) should be used to create families for structural framings and columns. The sections created with the Content Generator are based on industry-standard steel profile data—the same data used by Robot Structural Analysis Professional software. In addition, the newly created content mimics the appropriate physical characteristics, which is necessary when using the Revit physical model in code checking applications.

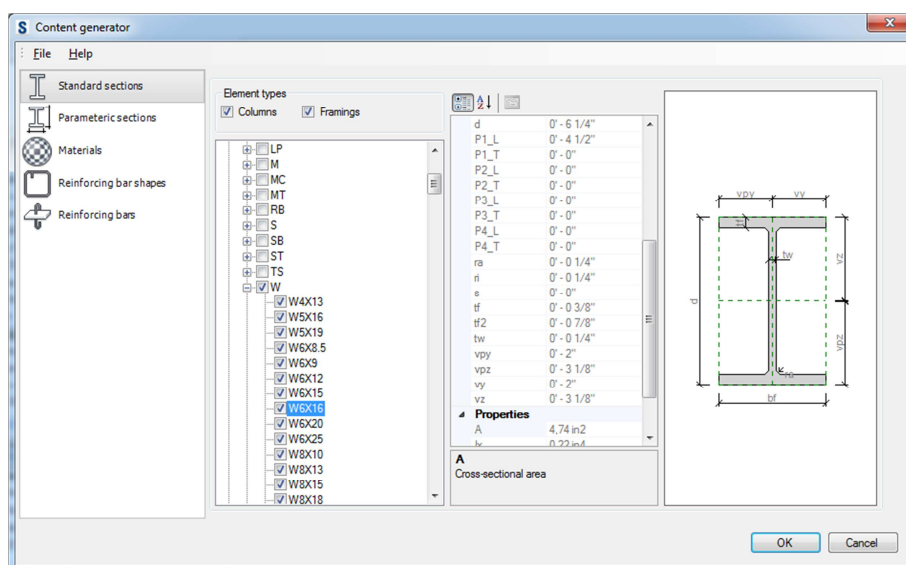


**Figure 8:** The Content Generator Extension is used to create families for structural framings and columns.

## Automatic Physical/Analytical Relations

### Alignment and Constraints


Creation of duplicate nodes at intersections is a common issue engineers encounter when linking a Revit model to analysis software. This often occurs when framing elements are not properly joined. One way to help reduce duplicate nodes is to align or constrain structural elements to grids, levels, and named reference planes in Revit software. This is particularly relevant for braced frames and where structural elements are offset from the primary grids.

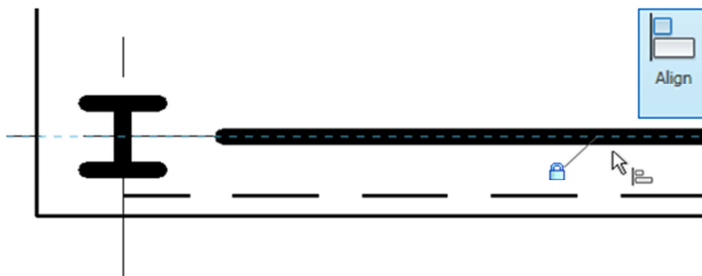

**Figure 9:** Explicitly constraining a beam to a grid using the Align tool.

### Analytical Model Projections

By default, Revit software assigns “Auto-detect” parameters for the horizontal and vertical projections. When using Auto-detect, the software will try to determine the best logical location for the analytical model line(s). In most cases, the software correctly determines the best analytical line location. Therefore, using the default Auto-detect is suggested. Override this parameter only if needed.

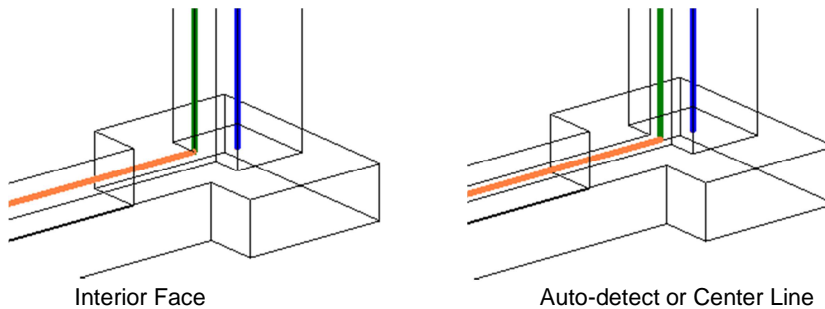

**Figure 10:** The effect of the analytical project parameter on an analytical model.


### Bracing

The use of the guidelines mentioned in the sections above can help prevent the creation of duplicate nodes at bracing intersections. In particular, use grids, levels, and named reference planes for braced frames offset from the primary grid lines.

When defining the brace, it is recommended that the user attach the brace start and end nodes to beams instead of columns. Notice the parameter distinctions in the Element Properties window. This affects where the cutback distance is located (cut by column or by beam) and the behavior of how the bracing node moves when other analytical elements are adjusted.

Structural Usage	Vertical Bracing
Start Attachment Level Reference	Level 3 - TOS
Start Attachment Elevation	0' 0"
End Attachment Type	Distance
End Attachment Distance	9' 0"
End of Referenced Element	End

**Figure 11:** The difference in the element property parameters for braces based on attachment type.

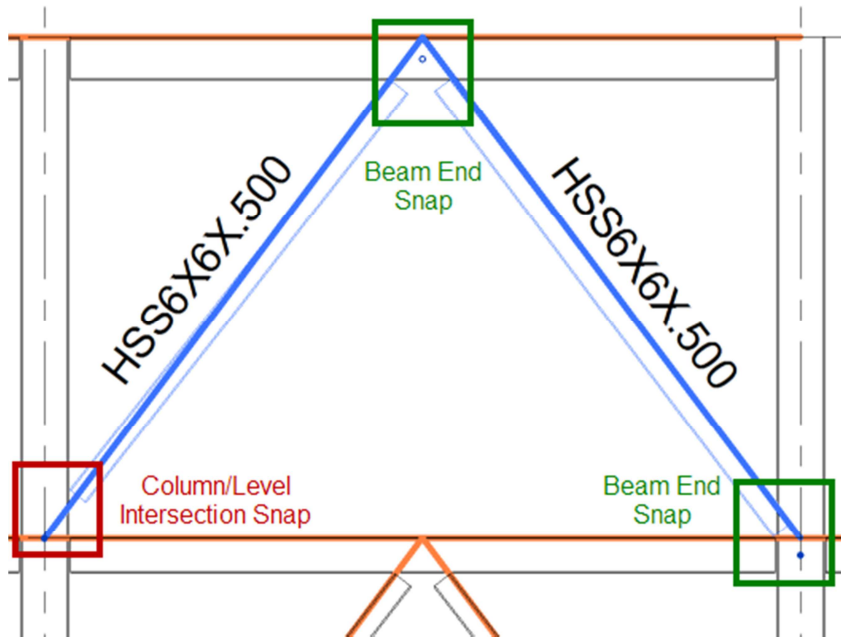


**Figure 12:** Notice the location of element end points and physical member setbacks for each attachment at the lower level.

Carefully inspect bracing intersections at sloped roofs or floors by zooming in and enabling Thin Lines to check that the brace node intersects the other elements. If it does not, use the Analytical Adjust tool to manually adjust the location to the beam-end node, using Tab to iterate through each element.


**Sloped Framing**

The link between Revit software and Robot Structural Analysis Professional supports the exchange of sloped framing. Multiple levels (e.g. levels at low and high sides) may be used in Revit software for construction documents, but they are not needed to link with Robot Structural Analysis Professional. Instead, a single level or even no level and element offsets are sufficient for interoperability with Robot Structural Analysis

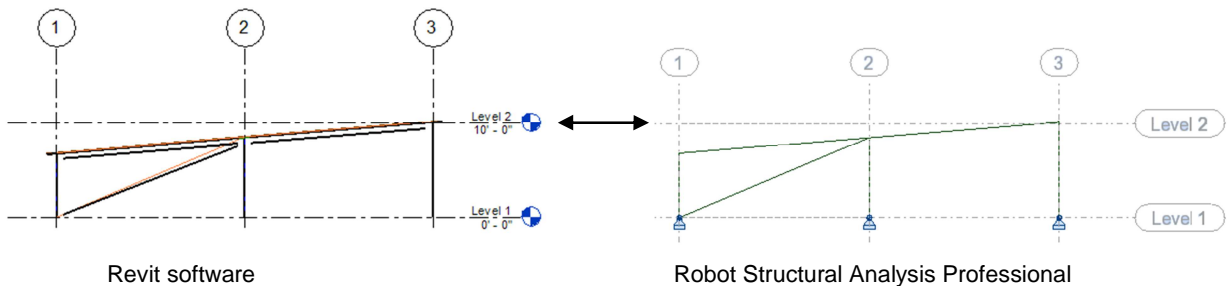


Professional.

Coplanar framing of a sloped floor having the projection parameter(s) set to Auto-detect will automatically align the analytical framing line to the analytical plane of the floor where the floor is set to Top of Slab or Bottom of Slab.

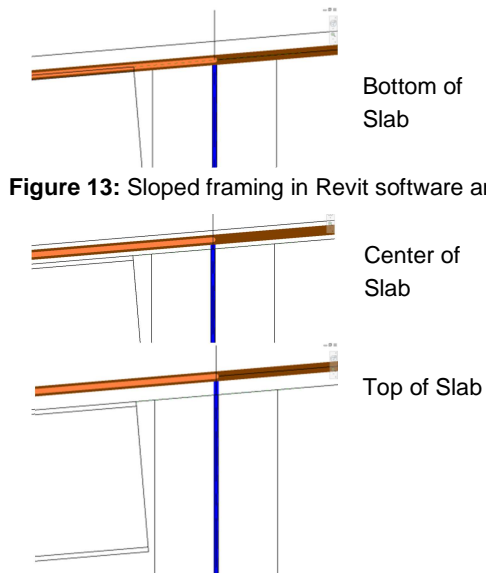

**Figure 13:** Sloped framing in Revit software and Robot Structural Analysis Professional.

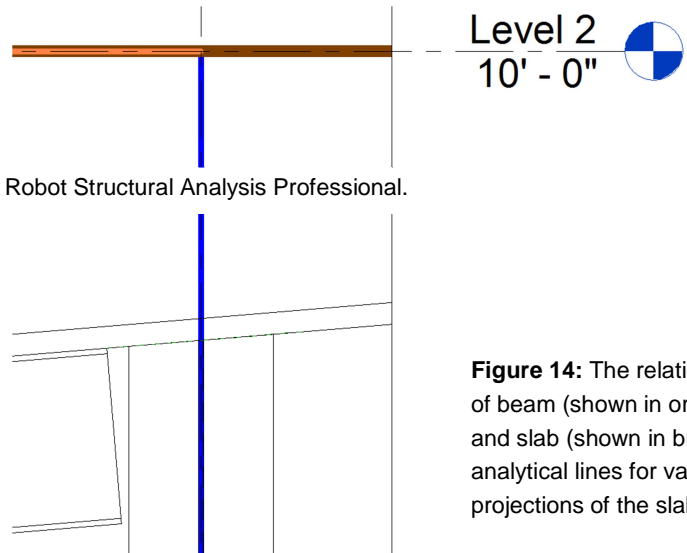


**Figure 14:** The relationship of beam (shown in orange) and slab (shown in brown) analytical lines for various projections of the slab.

### Phases and Design Options

The link between Revit software and Robot Structural Analysis Professional does not support the Revit Phase parameters. Therefore it is recommended that users send selected elements filtered by Phase to Robot Structural Analysis Professional, resulting in multiple analytical models. Sending the entire model will send all elements—regardless of Phase, such as created or demolished.

A similar approach is recommended for Design Options.

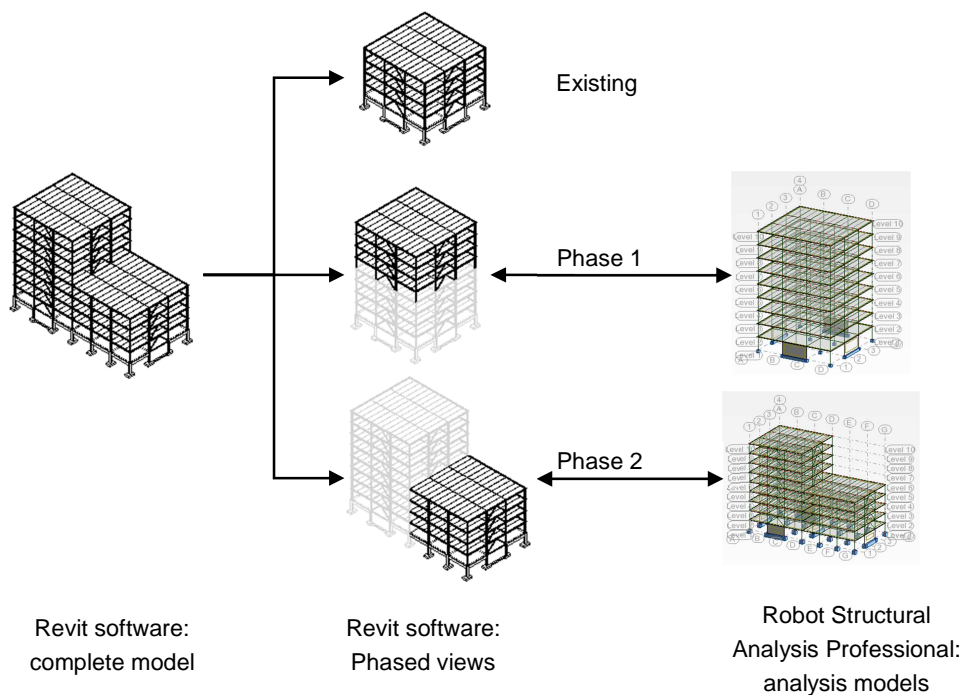

**Figure 15:** Multiple analytical models created from Phase-filtered view selections.

## Analytical Model Adjustment

Structural engineers often create analytical models that may seem illogical or hard to describe by an algorithm when compared to the physical model, as the engineer's decisions are often subjective and based on experience. As such, Revit software includes functionality to more easily create and edit the analytical model. The following features help users create an analytical representation of a physical model according to their individual expectations:

- Analytical alignment
  - Auto-detect adjustment
  - Projection adjustment
- Manual adjustment of the analytical model

### Analytical Alignment

Analytical alignment encompasses a number of different options for positioning the analytical model in relationship to itself and other analytical elements. There are two methods of analytical alignment: auto-detection and projection. Analytical alignment is determined by structural element instance properties.

Automatic adjustment is performed on a structural element in relation to a neighboring structural element. Revit software can automatically adjust the analytical model for beams, braces, structural columns, structural walls, structural floors, and foundation slabs to align these elements more accurately. This behavior is based on the instance parameters of the elements and tolerance settings.

For auto-detection to occur, the analytical Adjustment Methods instance properties must be set to Auto-detect for an element and its individual ends. This is the default justification method for all analytical structural elements. Automatic adjustment is then performed, as long as the analytical model of the adjacent element is within tolerance.

Each structural member has optional locations for its analytical projection plane. These projection plane locations are relative either to the levels of the structure or to the structural element itself. Each projection plane for each element has a default location, but the user may change the location by adjusting the Vertical Parameter on the Analytical Model section of the Properties palette.

### Manual Adjustment of the Analytical Model


Revit software includes a special analytical edit mode that enables direct manipulation of the analytical model, providing greater control.

In this edit mode, the user can directly modify the analytical model elements of beams, braces, columns, floors, and walls. To activate the analytical edit mode, select the Analytical Adjust icon on the Analyze tab. Additional access is provided on the contextual tabs of all the analytical elements.

When the edit mode is activated, node elements appear at the ends of all analytical beams, braces, and columns. In addition, analytical floors, foundation slabs, and walls have corner analytical nodes. All non-analytical elements are set to half-tone and are not selectable.



When the linear analytical element is selected, the widgets display at the ends of the element with its local coordinate system. You can toggle between the global and the local coordinate system simply by hitting the spacebar.

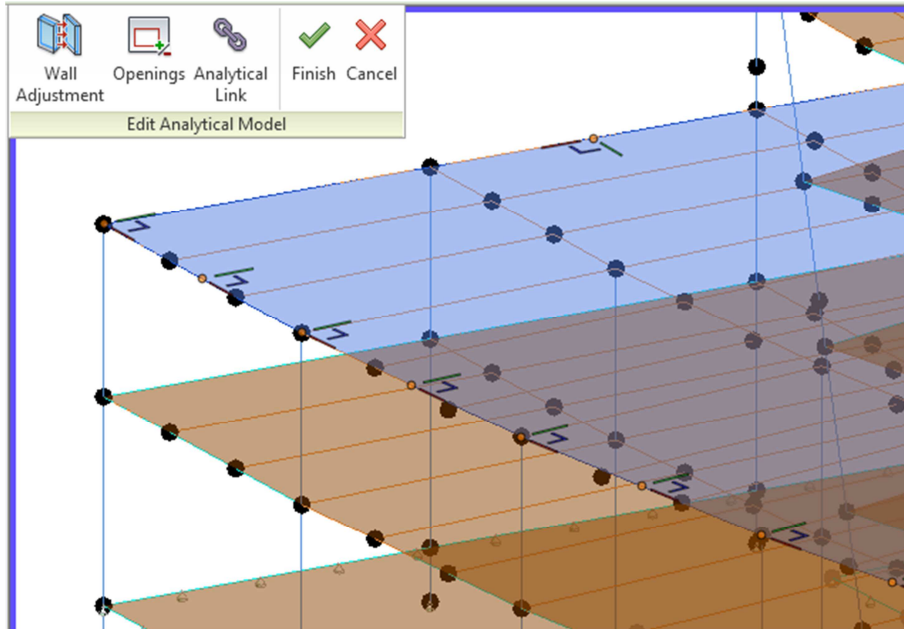


**Figure 16:** Revit software includes a special analytical edit mode that enables direct manipulation of the analytical model.

When floors or foundation slabs in the analytical model are selected, the user sees controls posted at all corners and edges, which allow direct manipulation of the analytical model. You may select individual edges by using the Tab key while hovering over an edge. Pressing the spacebar will cycle through edge local and global drag widget arrow orientations.

You can also select the analytical node itself, resulting in the display of a widget for the node. Moving the node will move the ends of all elements that join the node. To remove a single element from the analytical node, first select the element and then use the widgets that appear at its end to move only the end of that element. The same behavior works for multi-selection. If you want to remove two elements from an analytical node, select each element and move the widget. Only those elements will be moved and be disconnected from the analytical node.

The presence of openings in a surface analytical model can make it overly complicated for analysis. Engineers may want to simplify the analytical model by specifying which openings should not be included in the model. The openings editor allows you to identify openings that will be ignored in analytical floors, foundation slabs, and walls.

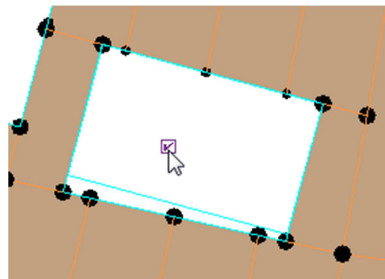

**Figure 17:** To simplify the analytical model, Revit users can identify openings in floors, foundation slabs, and walls that will be ignored during analysis.


In the analytical edit mode, selecting the Openings button launches the openings editor. In this editor, each opening in an analytical model has a checkbox. To ignore the opening during analysis, simply uncheck the checkbox and the opening will be removed from the analytical model, yet remain in the physical model.

An analytical link is an element connecting two separate analytical nodes. Analytical links may be used in certain situations such as connecting offset columns or beams, or modeling rigid floor diaphragms. Manually creating analytical links helps to simplify and accelerate structural analysis of the model.

## Analytical Model Consistency Checks

### Warnings


Be sure to inspect and correct all elements that trigger a warning such as “Beam or Brace is slightly off axis and may cause inaccuracies.” Typically, the corrective action is to align and constrain the element to a grid or reference plane.

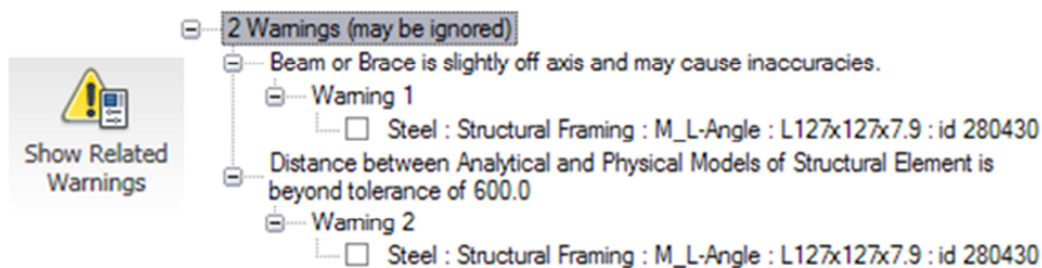

**Figure 18:** Review warnings and make appropriate corrections.

### Analytical Check Tools

Before sending a Revit model to Robot Structural Analysis Professional, it is important to check member supports and perform analytical/physical model consistency checks. These checks will also help prevent the creation of duplicate nodes and the generation of other errors or warnings when linking to Robot Structural Analysis Professional.

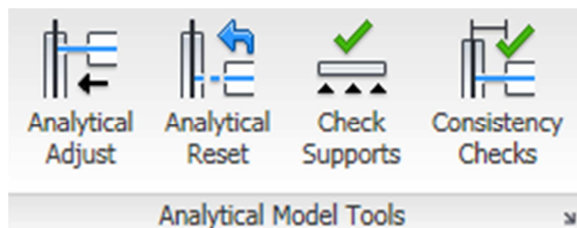


**Figure 19:** Revit analytical model tools.

Tools for analytical consistency provide warnings in the early stages of design about the stability of the structure. This gives a user greater insight into a design prior to submitting it for complete analysis.

During a member support check, the software will inspect each structural element to help see if it is correctly supported. For example, a typical beam should be supported by another beam, a column, or a wall. For each element that is identified as not supported, the software will generate a warning message. This member support check will also help identify circular support conditions.

## INTEGRATING REVIT AND ROBOT STRUCTURAL ANALYSIS PROFESSIONAL

An analytical/ physical model consistency check inspects the relationship between an element's physical location and its analytical line. Tolerances can be configured in the Structural Settings dialog box. For example, a warning will be generated if the analytical model line is more than 12 inches from the “physical” model per the settings shown in the figure below.

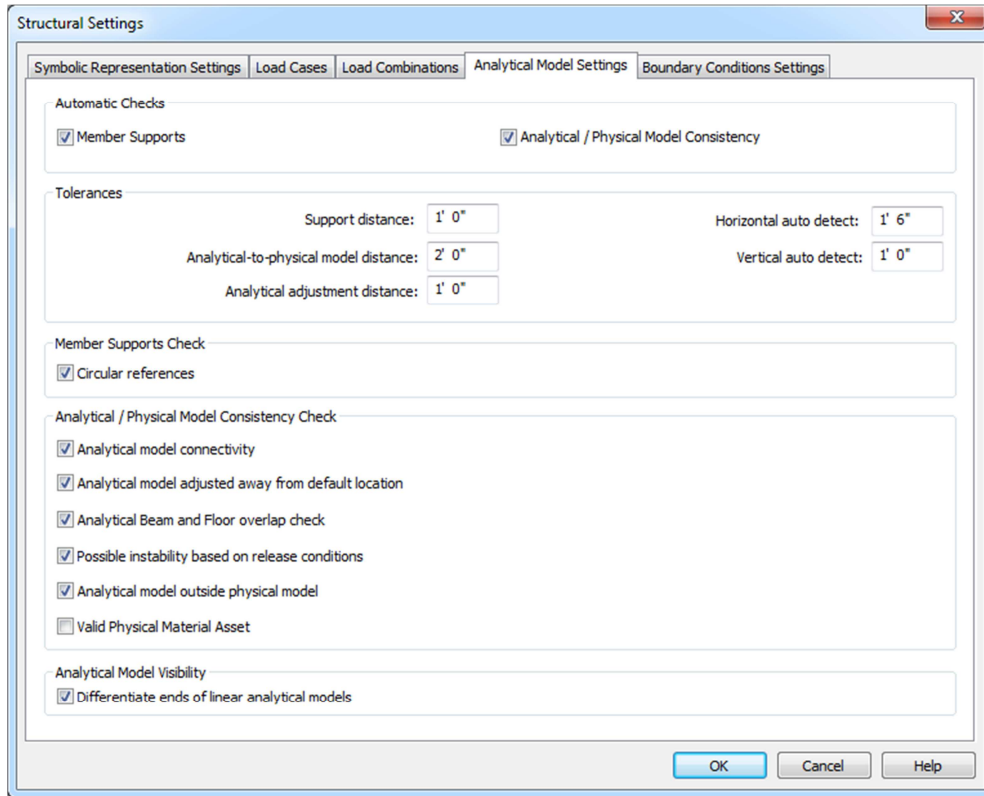

**Figure 20:** Analytical model settings in Revit software.

This analytical/ physical model consistency check is particularly important for elements that have overridden Horizontal or Vertical projections. During the design process, an element may be significantly moved or adjusted. If the overridden Projection parameter is not updated, the analytical model will be significantly different from the physical model.

Both of these checks can be performed manually or automatically. Automatic checking is not recommended during the initial creation of a Revit model or during significant revision to a structure. Use automatic checking once the design process has stabilized and only minor changes occur.

## Analytical Attributes

### Member End Releases

Member end releases may be adjusted in both Revit software and Robot Structural Analysis Professional. It is recommended that those adjustments be made in Revit software and the adjustments should reflect the structure's expected behavior. Those adjustments can also be made in Robot Structural Analysis Professional if a more robust toolset and settings are needed.

When controlling the member end releases in Revit software, select “Use Revit settings” when transferring a model to Robot Structural Analysis Professional.



**Figure 21:** Send Options recommended when controlling the member end releases in Revit software.

By default, Revit software creates pinned connections between member ends. As discussed earlier in this paper, sending a model created in this fashion to Robot Structural Analysis Professional will invariably reveal numerous instabilities and result in calculation errors. Therefore, when the model is initially sent to Robot Structural Analysis Professional, select “Do not use Revit Settings”, and make all adjustments in Robot Structural Analysis. All the end release adjustments will be transferred back to Revit software during the next update of the Revit model from Robot Structural Analysis Professional. For subsequent Sends to Robot Structural Analysis, select “Use Revit Settings”.



**Figure 22:** Send Options recommended for first export to Robot Structural Analysis Professional.

## Best Practices for Updates and Collaboration

The Revit structural model combines a physical representation of the structure with an analytical representation. The bidirectional link between Revit software and Robot Structural Analysis Professional enables this common model to be used for structural analysis and design, drawing production, and project coordination.

During the design process, the engineer uses the Revit model in Robot Structural Analysis Professional for analysis and design. In parallel, the designer uses Revit software to review, accept, or reject the engineer’s proposals represented in the analytical model—or even suggest another solution based on the engineer’s suggestions.

All changes made by the engineer to cross-sections and materials using Robot Structural Analysis Professional can be viewed in the physical model as well by the designer using Revit software.

A diverse range of results and structural parameters—including reinforcement for concrete structural element—are transferred from Robot Structural Analysis Professional to Revit software. This information provides the designer with valuable design intent regarding the reinforcement of the concrete elements.

Since the structural design process is iterative, there may be a need to send the structural model back to Robot Structural Analysis Professional for further analyses after making design changes. When the designer transfers the Revit model back to Robot Structural Analysis Professional, all changes made in Robot Structural Analysis Professional are maintained in Revit software and analysis-centric information such as meshing parameters, additional loads, and so forth are preserved. This helps support the integration and preservation of data between Revit software and Robot Structural Analysis

Professional throughout the iterative design process and also helps to enhance collaboration.

## Scope of Transferred Model Elements

The following sections describe how model elements in Revit software and Robot Structural Analysis are transferred between the applications. The tables use these symbols to describe the transfer:

- < > elements are transferred in both directions
- > or < elements are transferred in that direction only
- NA elements are not transferred
- P elements are transferred one way with data preserved but not accessible

Any limitations related to the transfer of an element are noted as well.

### Supports

Isolated Foundations and Point Boundary Conditions modeled in Revit software are transferred to Robot Structural Analysis Professional as Nodal Supports. The relationship between Nodal Supports in Robot Structural Analysis Professional created from Isolated Foundations in Revit software is preserved on subsequent exchanges between the software applications. However, Nodal Supports *initially* modeled in Robot Structural Analysis Professional are transferred to Revit software as Point Boundary Conditions regardless of their release settings or location (e.g. base of Column). Nodal Supports created from Isolated Foundations in Revit software are initially transferred to Robot Structural Analysis Professional as fully Fixed, thus the engineer may need to adjust the Nodal Support releases in Robot Structural Analysis Professional for more accurate analysis.

**Figure 23:** Table of Nodal Elements

Revit software		Robot Structural Analysis Professional
Isolated Foundation	>	Nodal Support
Point Boundary Condition	<>	Nodal Support

When sending selected portions of a model (for instance the top level of a building), new Boundary Conditions will need to be defined in Robot Structural Analysis Professional. When updating the selected portion, consider deselecting the new Robot Structural Analysis Professional Nodal Supports prior to updating the Revit model. Otherwise, the Nodal Supports will be transferred to Revit software. These same practices generally apply when linking a Revit model with other structural analysis software.

The Inactive Status of Nodes in Robot Structural Analysis Professional is transferred to/from and preserved in the Revit model; however, this information is not visible or readily accessible to the user.

## Linear Elements

Structural Columns, Framing elements, and Braces modeled in Revit software are transferred to Robot Structural Analysis Professional as bar elements—Columns, Beams, and Simple Bars, respectively. Revit parameters such as Analyze As (e.g. Lateral, Gravity) and Framing Type (e.g. Girder, Joist) have no bearing on the Robot Structural Analysis Professional element.

Revit elements such as Structural Columns spanning multiple levels are transferred intact to Robot Structural Analysis Professional as “physical” members. During analysis these “physical” members are split into finite elements at intersecting framing nodes.

Wall Foundations and Line Boundary Conditions modeled in Revit software are transferred to Robot Structural Analysis Professional as Linear Supports. The mode of transfer between Revit software and Robot Structural Analysis Professional is the same as that of Nodal Supports.

Curved Beams modeled in Revit software are transferred to Robot Structural Analysis Professional as discretized linear Beams. By default, Robot Structural Analysis Professional will provide a fine discretization unless the discretization parameters (Approximate Curve) are defined for the element in Revit software. When updating the Revit model from Robot Structural Analysis Professional, Robot Structural Analysis Professional will preserve the discretized beam segment information in Revit software as new hidden data rather than creating a new—or updating an existing—single curved beam.

Beam Systems and Trusses are container objects in Revit software. The individual framing elements contained in Beam Systems and Trusses are transferred to Robot Structural Analysis Professional as Beams or Bars while the Beam System and Truss container objects are not. The individual framing members hosted by Beam Systems and Trusses are editable in Robot Structural Analysis Professional and updated accordingly in Revit software. However, it is recommended that any modification of the member layout be performed in Revit software instead of Robot Structural Analysis Professional. Also, note that the Beam System Tag will not update since this is a function of the Beam Type Parameter of the Beam System in Revit software.

**Figure 24:** Table of Bar and Linear Elements

Revit software		Robot Structural Analysis Professional
Line Boundary Condition	>	Linear Support
Wall Foundation	>	Linear Support
Structural Column	<>	Column
Beam	<>	Beam
Brace	<>	Bar
Curved Beam	P>	Discretized Beams
Beam System	NA	

Truss	NA
-------	----

Several of the Element Parameters in Revit software are transferred to and from Robot Structural Analysis Professional. Other Robot Structural Analysis Professional design parameters such as slenderness and buckling coefficients are also transferred and preserved in the Revit model, but are not visible or accessible to the Revit software user.

**Figure 25:** Table of Bar and Linear Element Parameters

Revit software		Robot Structural Analysis Professional
Offset	>	Offset
Analytical Link	>	Rigid Link
Cross-Section Rotation	<>	Gamma Angle
	P	Cable
	P	Elastic Ground
	P	Geometric Imperfection
	P	Non-linear Hinge
End Release	<>	End Release
	P	Member Type
	P	Inactive Status
	P	Shear force respect in deformation
	P	Tension / Compression Member
	P	Axial Forces Only

### Planar Elements

Area Boundary Conditions modeled in Revit software are transferred to Robot Structural Analysis Professional as Planar Supports. Both Pinned and user-defined supports are transferred. Planar Supports in Robot Structural Analysis Professional are not transferred to or preserved in Revit software.

Structural Floors and Structural Walls modeled in Revit software are transferred to Robot Structural Analysis Professional as Floor and Wall panel elements, respectively, which can be meshed into finite elements for analysis and design. Roofs modeled in Revit software are considered non-structural and are not transferred to Robot Structural Analysis Professional. If steel roof decking is needed in Robot Structural Analysis Professional for analysis and design, it should be modeled in Revit software as a Structural Floor.

## INTEGRATING REVIT AND ROBOT STRUCTURAL ANALYSIS PROFESSIONAL

Foundation Slabs are transferred to Robot Structural Analysis Professional as Floors and returned to Revit software as a Structural Floor rather than a Foundation Slab. Concrete floors in Robot Structural Analysis Professional have the same cross-sectional and material properties as those in Revit software. Floors with corrugated steel decking are transferred to Robot Structural Analysis Professional with transformed section and material properties.

Curved Structural Walls modeled in Revit software are transferred to Robot Structural Analysis Professional as curved Walls. Similar to curved beams, curved Walls in Robot Structural Analysis Professional are transferred to Revit software and preserved there as hidden data.

**Figure 26:** Table of Planar Elements

Revit software		Robot Structural Analysis Professional
Area Boundary Condition	>	Planar Support
Foundation Slab	>	Floor
Structural Floor	<>	Floor
Structural Wall	<>	Wall
Structural Curtain Walls	>	Cladding
Curved Structural Wall	P>	Wall
Wall Opening & Window	P>	Opening
Door	P>	Opening
Vertical or Shaft Opening	P>	Opening
Slab Edge	NA	

Wall, Vertical, and Shaft openings, Windows, and openings created by Editing Profile modeled in Revit software are transferred to Robot Structural Analysis Professional as Openings. The perimeter shape of a Floor, Wall, and Slab including arcs are transferred as the contour shape of the panel in Robot Structural Analysis Professional. Doors modeled in Revit software are transferred to Robot Structural Analysis Professional as part of the perimeter panel definition rather than openings. No relationship is maintained between the Revit software openings and the Robot Structural Analysis Professional openings. Therefore, any new openings created in Robot Structural Analysis Professional (or modifications made to existing openings) are not updated in Revit software.

Structural Curtain Walls modeled in Revit software can be transferred to Robot Structural Analysis Professional as a single Wall panel; or as a single Wall panel with mullions transferred as Bar elements, or as multiple Cladding contours for each Curtain Wall Panel with mullions transferred as Bar elements.



## INTEGRATING REVIT AND ROBOT STRUCTURAL ANALYSIS PROFESSIONAL

Finite element auto-meshing of the transferred Floor and Wall panels is not done automatically during the transfer, and must be completed by the engineer in Robot Structural Analysis Professional. The auto-meshing and other planar parameters are preserved as hidden data in Revit software during subsequent transfers. However, the auto-mesh should be reviewed after significant revision to the Floor layout.

**Figure 27:** Table of Planar Element Parameters

Revit software		Robot Structural Analysis Professional
	P	Load Distribution
	P	Reinforcement Design Parameters
	P	Calculation Model
	P	Meshing Parameters
	NA	Emitters

## Loads

Loads, Load Natures, Load Cases, and Load Combinations are transferred between Revit software and Robot Structural Analysis Professional. Load elements created in Revit software and transferred to Robot Structural Analysis Professional are editable. However, changes made in Robot Structural Analysis Professional are not propagated back to Revit software. Loads created in Robot Structural Analysis Professional are transferred to and preserved in the Revit model; however, they are hidden and are not accessible by the Revit software user.

**Figure 28:** Table of Load Elements

Revit software		Robot Structural Analysis Professional
Load Nature	>	Load Nature
Load Case	>	Load Case
Load Combination	>	Load Combination
(Hosted) Point Load	>	Nodal Load
(Hosted) Line Load	>	Linear Load
(Hosted) Area Load	>	Planar Load

## Concrete Reinforcement

Structural Rebar modeled in Revit software is only transferred to Robot Structural Analysis Professional for Structural Columns, Beams, and Spread Footings. Area and Path Reinforcement and Structural Rebar modeled in other elements or modeled manually in Revit software are not transferred to Robot Structural Analysis Professional. Rebar

designed in Robot Structural Analysis Professional for Columns, Beams, and Spread Footings are transferred to Revit software.

Reinforcement patterns created with the use of Revit Extensions (Reinforcement of Columns, Reinforcement of Beams, and Reinforcement of Spread Footings) are transferred to Robot Structural Analysis Professional based on the parametric definition of patterns. Therefore, the use of these Revit Extensions is recommended for reinforcement definition and Revit software can be used to create rebar using direct manipulation rules if needed.

**Figure 29:** Table of Rebar Elements

Revit software	Robot Structural Analysis Professional	
Area Reinforcement	NA	
Path Reinforcement	NA	
Structural Rebar	<>	Rebar
Revit Extensions Patterns	<	Revit Extensions Patterns
Revit Extensions Required Reinforcement	<	Required Reinforcement

## Other Elements and Element Parameters

Materials, Grids, and Levels modeled in Revit software are created as Materials, Structural Axes, and Stories in Robot Structural Analysis Professional. The bidirectional transfer of these elements is limited. Therefore, it is recommended that the user create and adjust these elements in Revit software. Many of the other project-wide and structural analysis parameters in Robot Structural Analysis Professional are sent to and preserved in Revit software.

**Figure 30:** Table of Other Elements and Element Parameters

Revit software	Robot Structural Analysis Professional	
Material	>	Material
Grid	>	Structural Axis
Level	<>	Story
	P	Global Mesh Parameters
	P	Active Section Databases
	P	Units
	P	Analysis Parameters
	P	Model Generation Parameters

## Summary

The integration between Revit software and Robot Structural Analysis Professional facilitates the coordination of design information and construction documentation. The integration supports multiple workflows stemming from choices regarding initial modeling software and the use of multiple analytical models to split the workload. Additionally, Revit software offers many tools and modeling practices to prepare a model for a smoother interoperability with Robot Structural Analysis Professional and other widely-used structural analysis software applications.

The result of better interoperability is a more streamlined and productive design process, the opportunity to perform more analysis to help find the best structural design option, and a better understanding of design intent yielding less errors and omissions.

Autodesk Revit, and Robot are registered trademarks or trademarks of Autodesk, Inc., and/or its subsidiaries and/or affiliates in the USA and/or other countries. All other brand names, product names, or trademarks belong to their respective holders. Autodesk reserves the right to alter product offerings, specifications and pricing at any time without notice, and is not responsible for typographical or graphical errors that may appear in this document.

© 2012 Autodesk, Inc. All rights reserved.